
CameraMan System II Presenter

Teacher Camera with *autoTrack*

User Guide




Overview of the Tracking System	2
Tracking Ring - Power Pack & Belt	2
Wearing the Tracker	3 - 4
To Activate <i>autoTrack</i>	5
Overview of <i>autoTrack</i> Camera Views	6
Setting or Changing <i>autoTrack</i> Camera Views	7
Adjusting View while in or out of <i>autoTrack</i> mode	8
Other Keypad Controls	9
Recharging the Tracking Power Pack	10
Using and Recharging the Auxiliary Power Pack	11

Overview

A **ParkerVision CameraMan System II Presenter** is installed as the **teacher camera** in your distance learning classroom.

This camera has an **automatic tracking feature** called **autoTrack**. When this feature is activated it allows the teacher to move about the classroom with the camera panning, tilting and focusing automatically and continuously, following the teacher's movements.

Tracking Ring - Power Pack & Belt

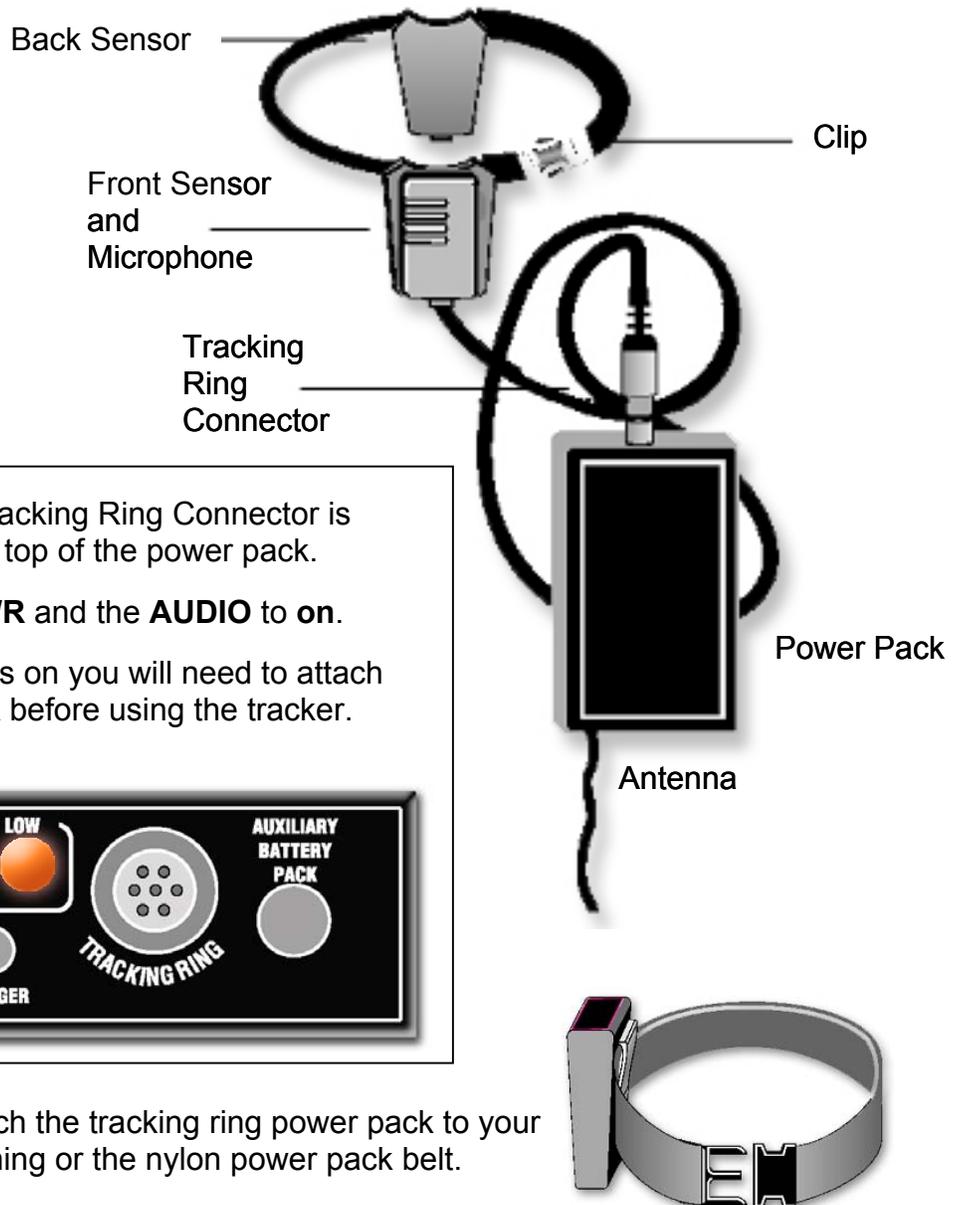

Be certain that the Tracking Ring Connector is firmly attached to the top of the power pack.

Switch the power **PWR** and the **AUDIO** to **on**.

If the **LOW** indicator is on you will need to attach the AUX battery pack before using the tracker. (See page 10.)

Attach the tracking ring power pack to your clothing or the nylon power pack belt.


Wearing the Tracker



Using the clip on the back of the power pack's nylon pouch, attach the Tracking Ring Power Pack either directly to your clothing or to the nylon Power Pack Belt.

Do not place the Power Pack in your pocket. This interferes with the RF signal and may affect the audio and tracking capability.

The Tracking Ring Power Pack must be worn so that the antenna hangs loosely.

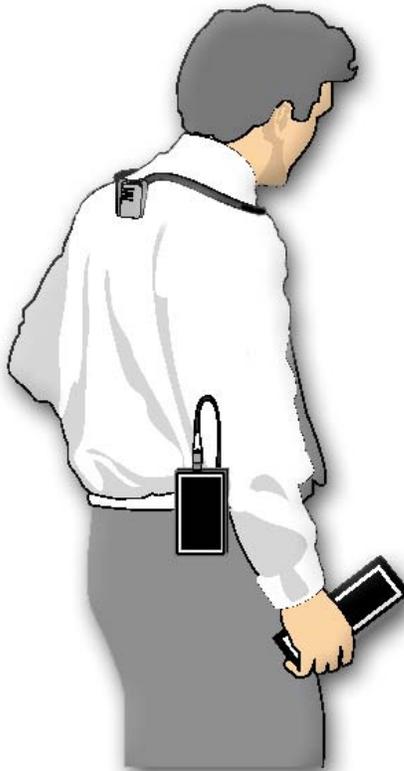


Be sure that the tracking sensors lie flat in front and in back.



Wearing the Tracker cont.

The **Back Sensor** should lie flat against the back of the collar or neck.


The **Front Sensor** should be lying flat and centered on the body, just above chest level.

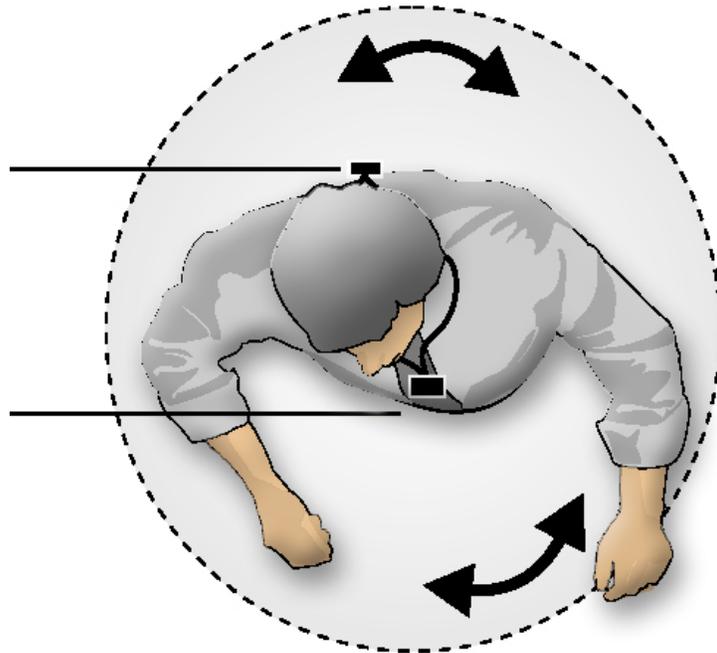

When the teacher turns around to point to a map, for example, the back sensor continues to receive the infrared tracking signal from the camera and the camera will continue to automatically track the teacher's movement.

The Tracking Sensors require a direct line-of-sight link with the camera.

You should be careful not to have hair or clothing covering the sensors.

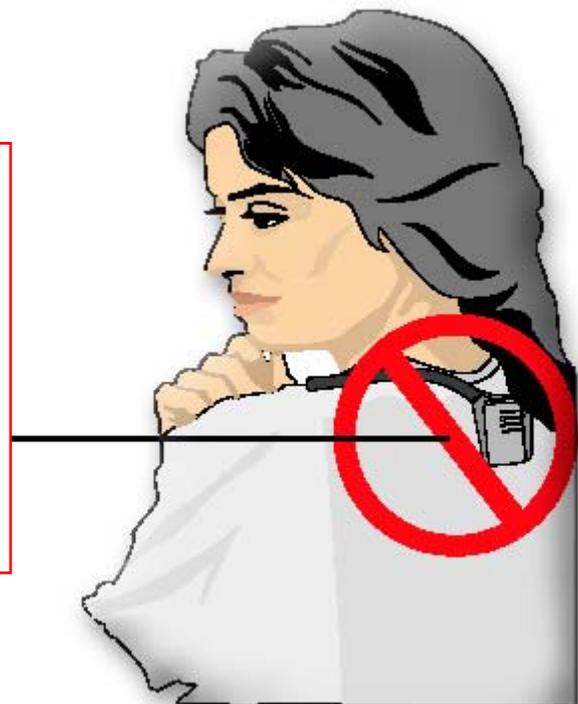

To Activate *autoTrack*

There are two options.

1. Touch the appropriate button on the **Teacher Camera Control** screen of your **Touch Panel**.

(See the Teacher Camera Control instructions in the **Touch Panel User Guide** section of this manual.)

2. Activate one of the ***autoTrack* Views** on the CameraMan wireless - remote control keypad.

It is possible to control the many of the functions of the *autoTrack* system using the **Touch Screen** system, However, the wireless keypad offers a number of features that are not included on the touch panels.

With the keypad, you can choose to have the camera track you while keeping you framed in the center of a **tight** or **wide** shot. (See following page.)

You can also choose to have the camera track you while keeping you **to the right or left in the frame**.

This feature can be very helpful when referring to maps or charts or when conversing with an individual.



The keypad will not function with weak or dead batteries. It does not come equipped with rechargeable batteries. Check inside the rear of your keypad for battery type. Although most keypads use two (2) AA batteries, some use 9-volt batteries.

Overview of autoTRACK Camera Views


You can choose from four **autoTRACK Views**.

You can store and recall these views from the Tracking System Keypad by pressing one of the **autoTRACKView buttons shown on page 5**.



To emphasize facial expressions, you can change to a close head shot with the **TIGHT autoTRACK View** button.



You can select to a full-body shot by pressing the **WIDE autoTRACK View** button.

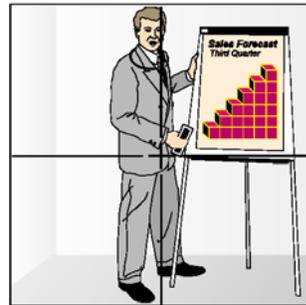

Teachers can also share the video screen with a map, chart, student or group of students by pressing the **LEFT** or **RIGHT autoTRACK View** buttons.

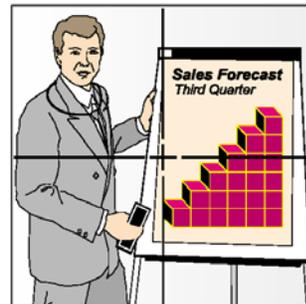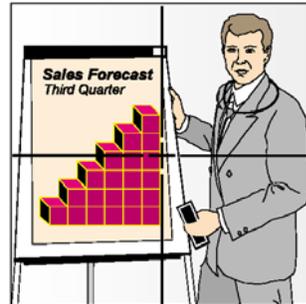

Setting or Changing *autoTrack* Camera Views

You may want to zoom-in slightly closer on the **WIDE autoTRACK View** or adjust your position in the video frame more to the left or right.

You have the flexibility to customize each **autoTRACK View** to suit your needs. While the procedure below is for changing the **Right autoTrack** view, the procedure is the same for customizing **Left, Tight, and Wide** views as well.

To SET or CHANGE the right autoTRACK VIEW:

1. After pressing the **RIGHT View** button, use the **SUBJECT POSITION** arrow buttons to position yourself to the desired location in the video frame.



2. If you want to change the view, use the manual **ZOOM** buttons to set the needed zoom perspective.

3. Press and hold the **RIGHT** button until you hear two beeps, indicating the new setting has been stored.

To RECALL the right autoTRACK VIEW:

Press and release the **RIGHT View** button. The CameraMan then recalls the information that you stored in the **RIGHT** button.

Adjusting Camera View When you are In or Out of *autoTrack* mode



SUBJECT POSITION arrows

Adjustments to your position in the frame can be made while you are in *autoTrack*.

Press any of the four directional **Subject Position arrows** to adjust your position in the current *autoTRACK* View. The up, down, right, or left arrows will change your position in the video frame without disengaging the *autoTrack*.

Manual PAN / TILT arrows

Press the up, down, right, or left PAN / TILT arrows to pan or tilt the camera in that direction.

If you use manual PAN / TILT controls while in *autoTrack*, the camera will stop tracking you.

Manual ZOOM

Press the **IN** or **OUT** button to zoom the camera in tighter or out further. ZOOM adjustments will not deactivate tracking if you are in *autoTrack* mode.

Other Keypad Controls

Location Preset Select

Used to set and recall preset positions.

autoTrack Views

See page 5.

Focus

Used to manually adjust the visual clarity of the teacher camera video.

auto Focus

Used to automatically adjust the visual clarity of the teacher camera video.


Zoom In / Out

Used to tighten and widen the camera's view.

Pan / Tilt

Used to manually adjust the camera's view.

Using the manual Pan / Tilt will disengage the autoTrack mode.

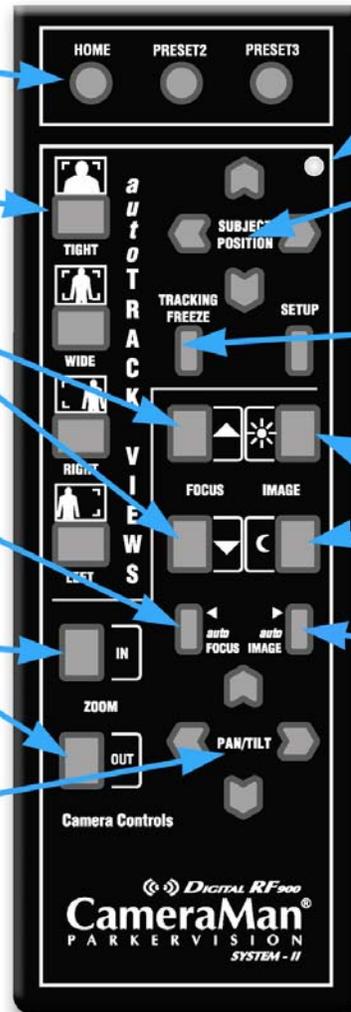

Indicator LED

Indicates keypad is in operation.

Subject Position Controls

See page 8.

Tracking Freeze

Used to disengage autoTrack and freeze the camera's movement.

Image Controls

Used to manually open and close the iris on the teacher camera.

autoImage

Used to automatically adjust the brightness and darkness of the teacher camera video.

Fresh batteries for the keypad should be kept on hand and installed regularly. Check inside the rear of your keypad for battery type. Although most keypads use two (2) AA batteries, some use 9-volt batteries.


Recharging the Power Packs

The Tracking Ring Power Pack comes with a built-in 4-hour Rechargeable Battery. When the battery is running low, the **Battery LOW** LED on the top of the Tracking Ring Power Pack **will glow red**. At this time, the Tracking Ring Power Pack should be recharged or the Auxiliary Battery Pack should be attached to the Tracking Ring Power Pack.

To recharge the battery:

1. Turn **OFF** the Tracking Ring Power Pack.
2. Set the switch on the front of the battery charger to **TRACKING POWER PACK**.
3. Plug the Battery Charger into an electrical outlet and connect the Power Pack to the charger, as shown in the diagram to the right.

The Battery Charger takes 2 to 3 hours to recharge the Tracking Ring Power Pack.

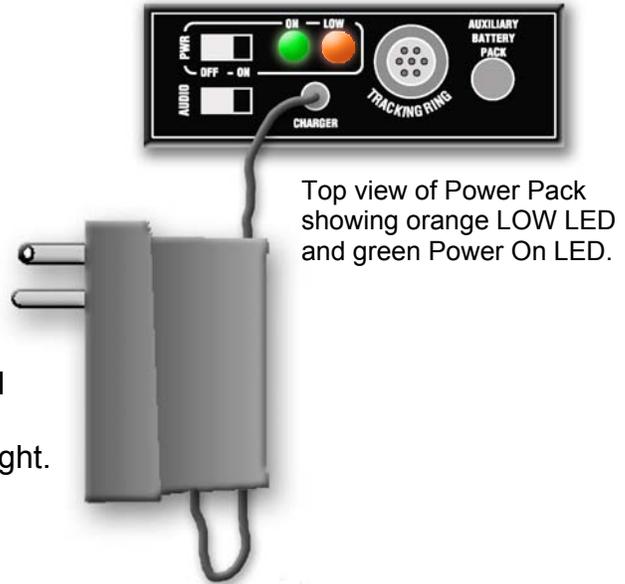

The LED on the Battery Charger indicates when the battery is fully-charged.

If a battery is very low, then the LED on the charger flashes slowly.

While the battery is charging, the LED on the charger remains solid.

When the battery is fully-charged, the LED on the charger flashes faster.

Using and Recharging the Auxiliary battery Pack


A Rechargeable Auxiliary Battery Pack is available to connect with the Tracking Ring Power Pack for extra long use.

When attached to the Tracking Ring Power Pack, the Auxiliary Battery Pack overrides the built-in battery.

If more than 4 hours of use is required, connect the Auxiliary Battery Pack to the Tracking Ring Power Pack.

To recharge the Auxiliary Battery Pack:

1. Turn **OFF** the Tracking Ring Power Pack.
2. Set the switch on the front of the Battery Charger to **AUXILIARY BATTERY PACK**.
3. Plug the Battery Charger into an electrical outlet and connect the Auxiliary Battery Pack to the charger.

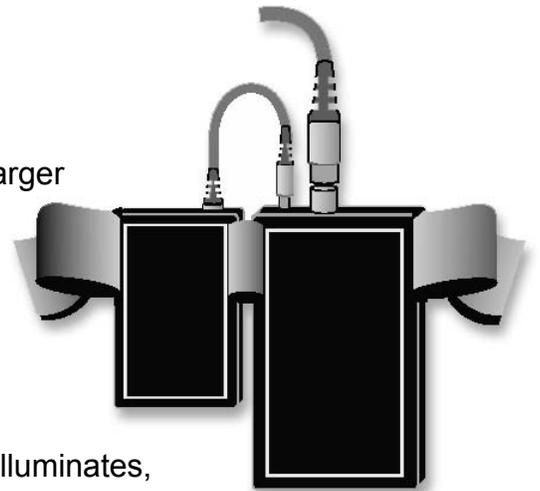

To get the maximum usage from the batteries, use the built-in battery first until the **Battery LOW** LED illuminates, then attach the Auxiliary Battery Pack.

The Battery Charger takes 4 – 6 hours to recharge the Auxiliary Battery Pack.

As a matter of regular practice, when you are done with a session, you should plug the tracking power pack into the charger. Be sure that the charger is plugged into the wall outlet and that the switch on the front of the charger is in the proper position.

When the tracking power pack is fully charged (indicated by the light on the charger flashing fast), you should then charge the auxiliary power pack. Again, be sure to move the switch on the front of the charger to the proper position.