

---

**Keene**

**Distance Learning Classroom**

# **Touch Panel User Guide**

## **Table of contents**

<b>Session Type</b>	<b>2</b>
<b>Teacher Camera Controls</b>	<b>5</b>
<b>Student Camera Controls</b>	<b>7</b>
<b>Quad Split Controls</b>	<b>8</b>
<b>Elmo Document Camera Controls</b>	<b>9</b>
<b>Play VCR Controls</b>	<b>10</b>
<b>Computer &amp; Auxiliary Controls</b>	<b>11</b>
<b>Record VCR Controls</b>	<b>12</b>
<b>Utilities Controls</b>	<b>13</b>
<b>Volume Controls</b>	<b><i>Important Note Regarding Echo</i></b>
<b>Teacher Camera Presets</b>	<b>15</b>
<b>Student Camera Presets</b>	<b>16</b>
<b>Student Desk-button/Microphone Presets</b>	<b>17</b>

---

**BOCES**

**Distance  
Learning  
Program**

**Help Desk 1-888-427-9173**

**Quality • Access • Support**

 
---

## **Session Type**

The **Session Type** screen is the first screen that you will see.

If your touch panel screen is black it is most likely in sleep mode.

If your Touch Screen is black, touch the face of the screen and this screen should appear.


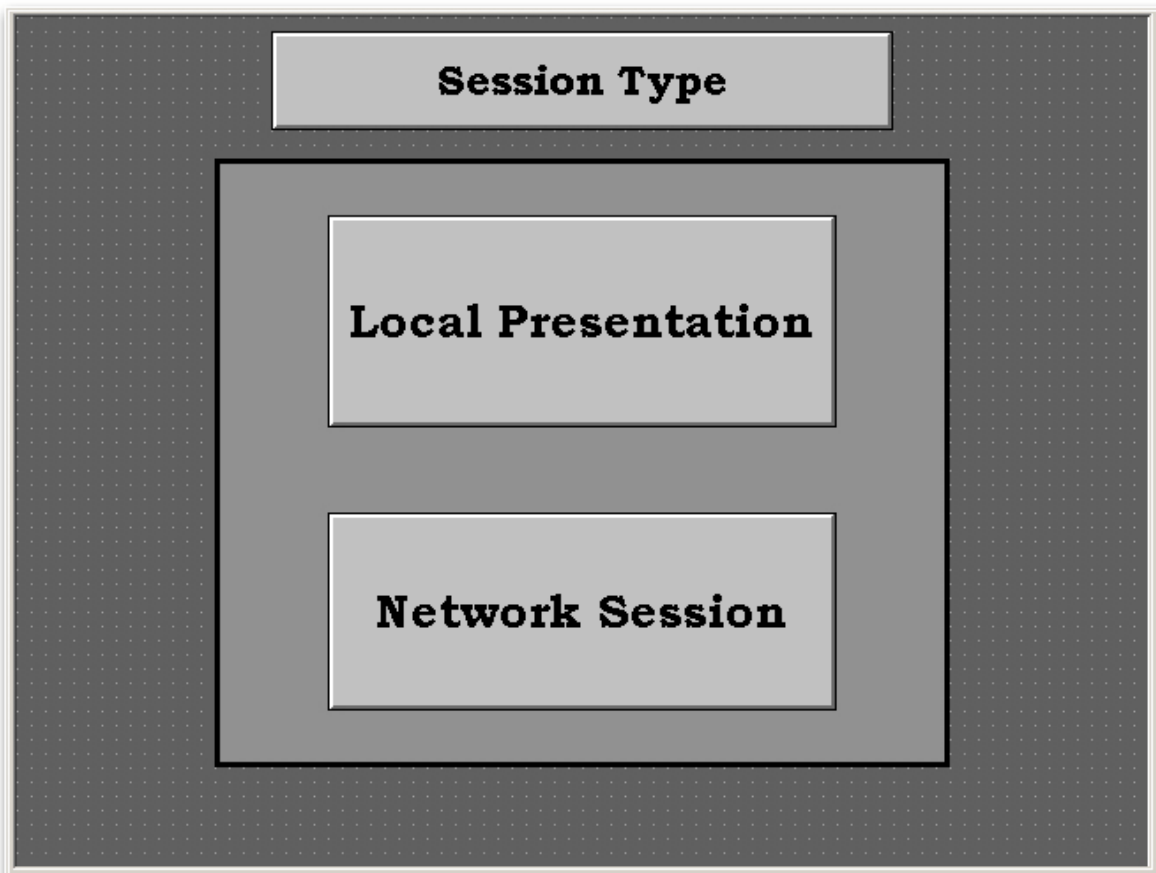


*Notes on selecting a session type follow on pages 3 and 4.*

## Session Type

  The screen at right allows you to configure the room for a local presentation or a distance learning network session.

If you choose Local you will proceed to the screen below.

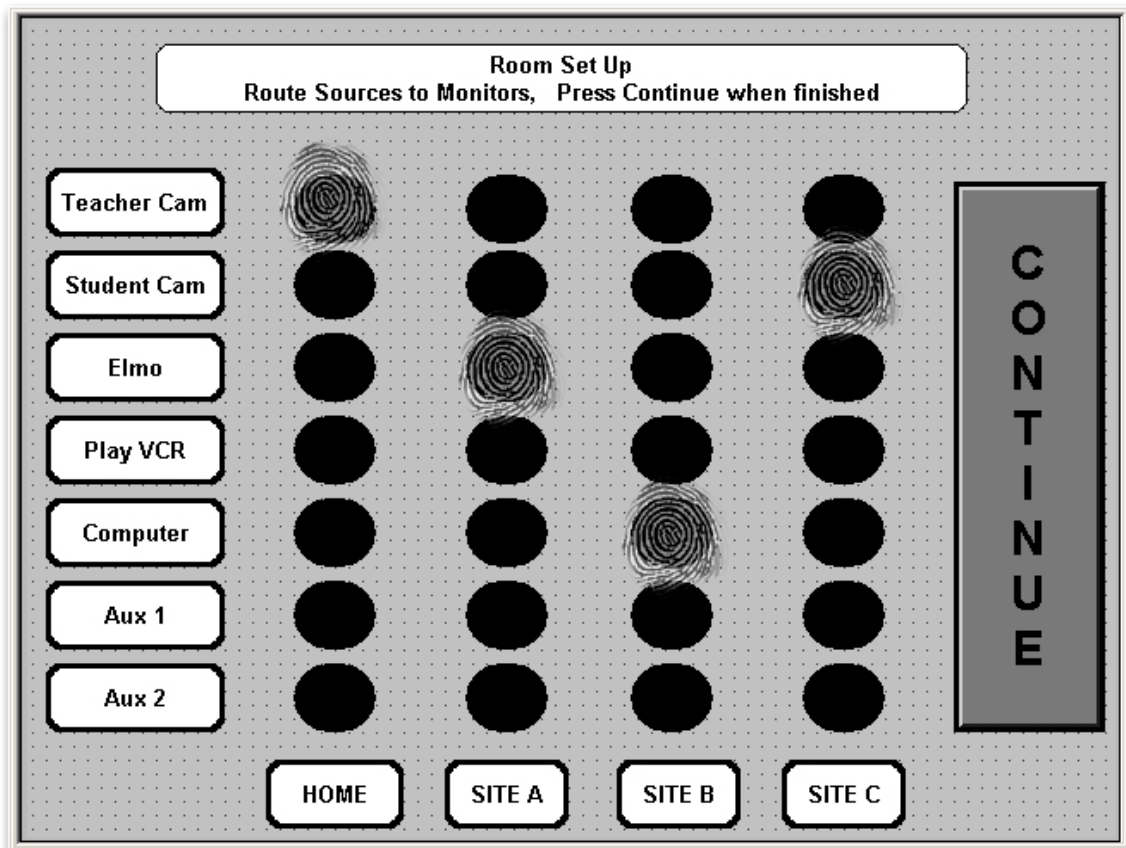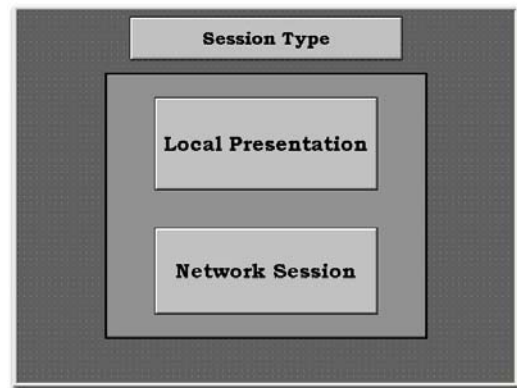


The seven buttons at the left of the screen correspond to the video source options. The four buttons at the bottom correspond to the four monitors in the front and rear of the room.

In the example above, the fingerprints indicate which buttons have been pushed. The teacher camera will display on the HOME monitor. The Elmo will display on SITE A monitor. The Computer will display on Site B monitor. The student camera will display on SITE C monitor.

---

## **Session Type** continued

 For a distance learning session, select **Fiber Network Session** by touching that button on the Session Type screen.

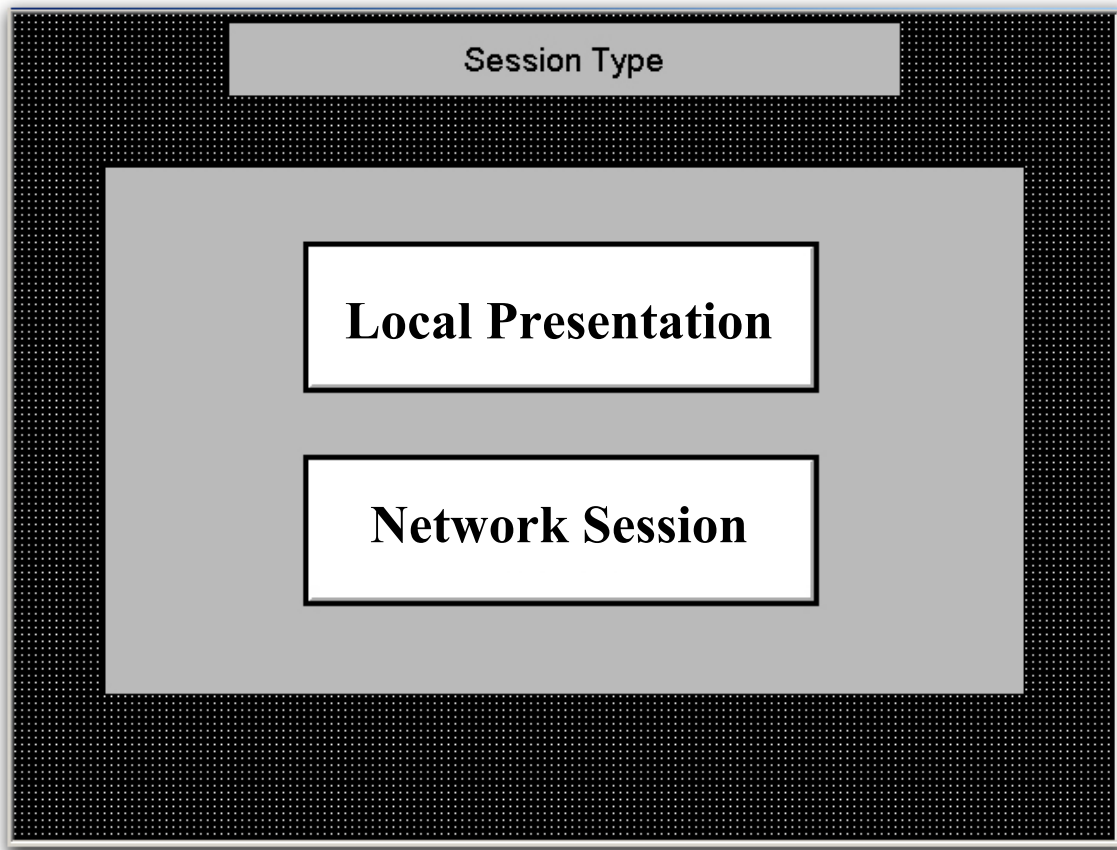


You will automatically proceed to the next screen.

---

# Teacher Camera Controls

 The Teacher Camera Control screen (shown below) appears as the default screen.

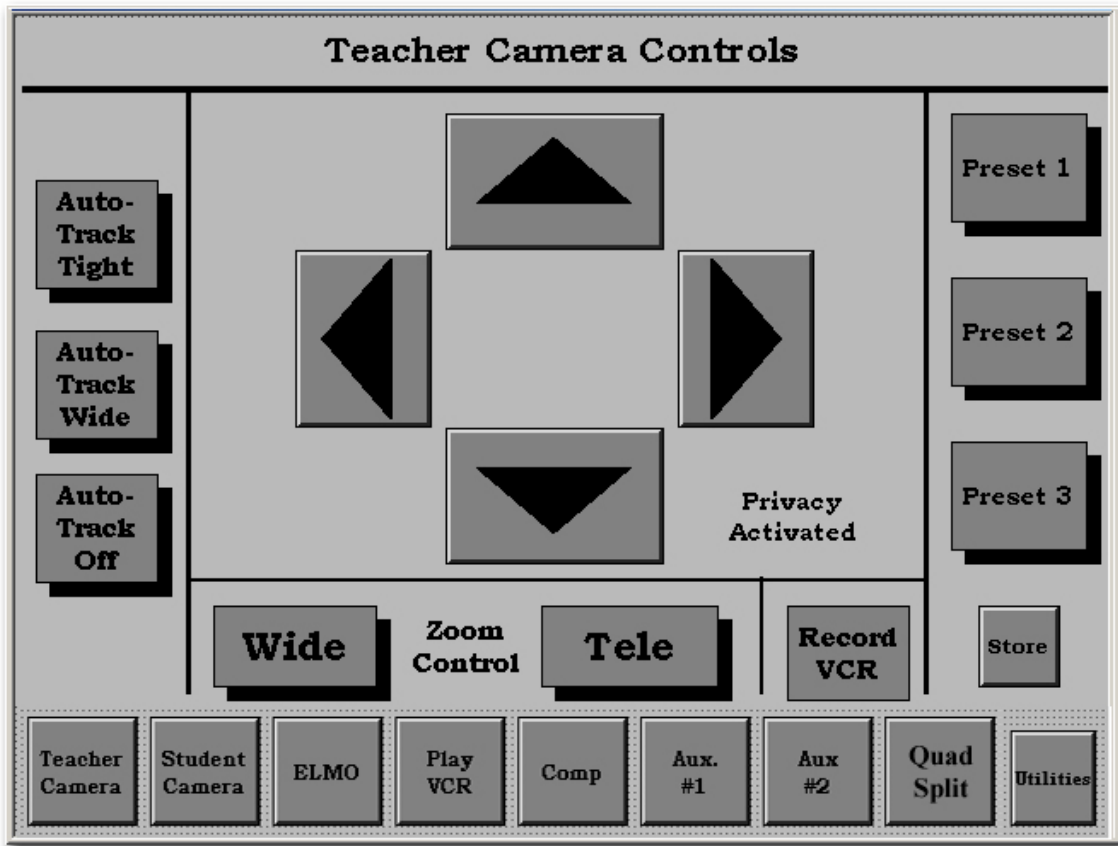


The buttons on the bottom of the screen are similar to a tool bar and appear on most screens selected.

Touch the button for the equipment you want to control or the function you want to perform.

---

# Teacher Camera Controls continued

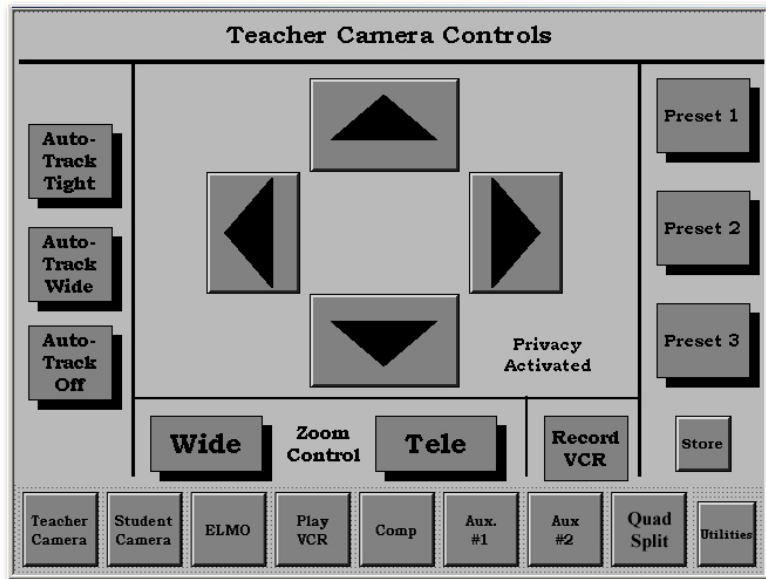 

## Preset Controls

Touch one of the numbered **Preset** buttons to move the camera to an established, preset position.

## Store

This button is *only* used when establishing or changing presets. It will erase previously established Presets.

(For detailed information about establishing or changing **Presets** see the notes and instructions beginning on page 14 of this section.)

## Pan/Tilt Controls

Touch the triangles [ ▲ ] that point up, down, right, and left, to pan and tilt the Teacher Camera to any desired position.

## Zoom Controls

Touch **Tele** to zoom the camera in tighter or **Wide** to zoom the camera out further.

## Auto-track Controls

 
Touch **Auto Track Tight** or **Auto Track Wide** to activate the camera tracking feature. **Auto Track Off** will deactivate the tracking system. [More information about the Auto-track feature is in the Teacher Camera section of this guide.](#)

Utilities will take you to that control screen.

## Tool Bar Buttons

All other buttons will take you to screens indicated by the text.

# Student Camera Control Screen

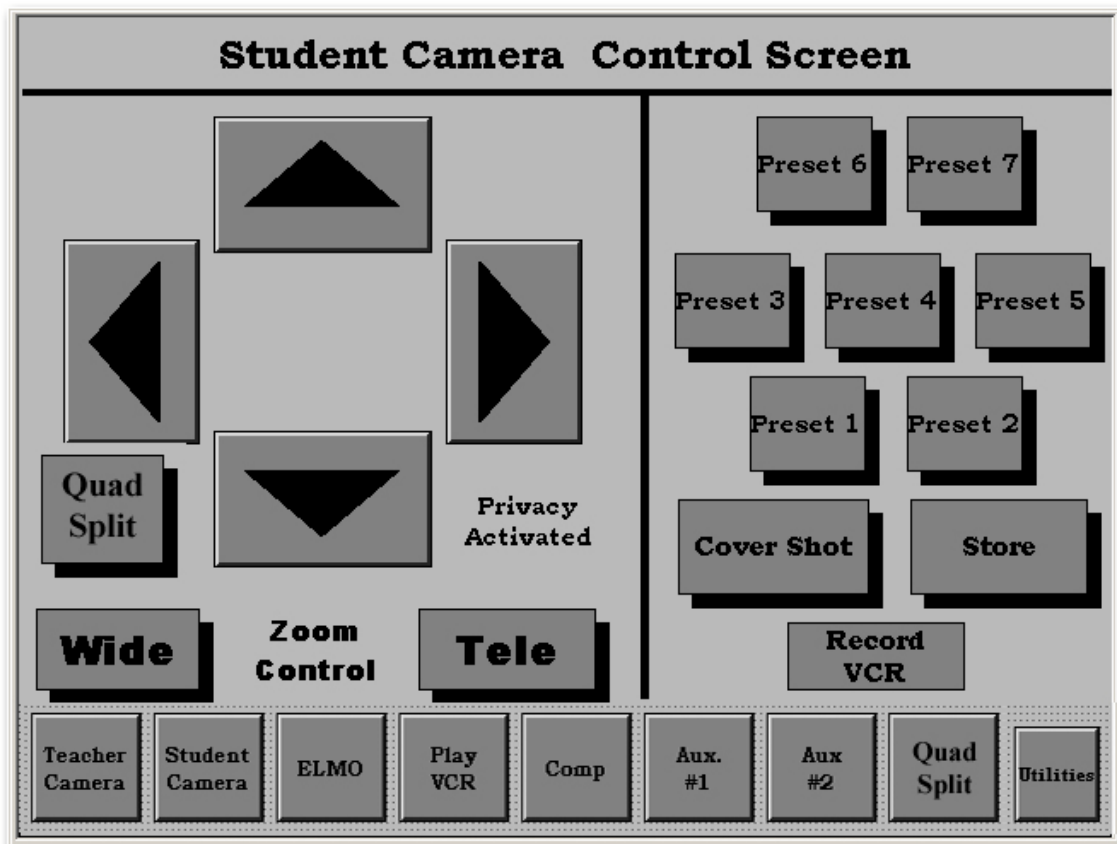

## Pan / Tilt / Zoom Controls

Operate these controls the same as you would for the Teacher Camera.

## Preset Controls

Operate the Preset Controls the same as you would for the Teacher Camera.

**Cover** is a special Preset that should be adjusted to a camera position that is [just wide enough](#) to allow all of the students to be seen in one shot.

**Store** is [only](#) used when establishing or changing presets. [It will erase previously established presets.](#) (For detailed information about establishing or changing camera position presets, see the **Presets** instructions beginning on page 14 of this section.)

**Utilities** will take you to that control screen.

 
BOCES

Distance  
Learning  
Program

Help Desk 1-888-427-9173


Quality • Access • Support

# Quad Split Control

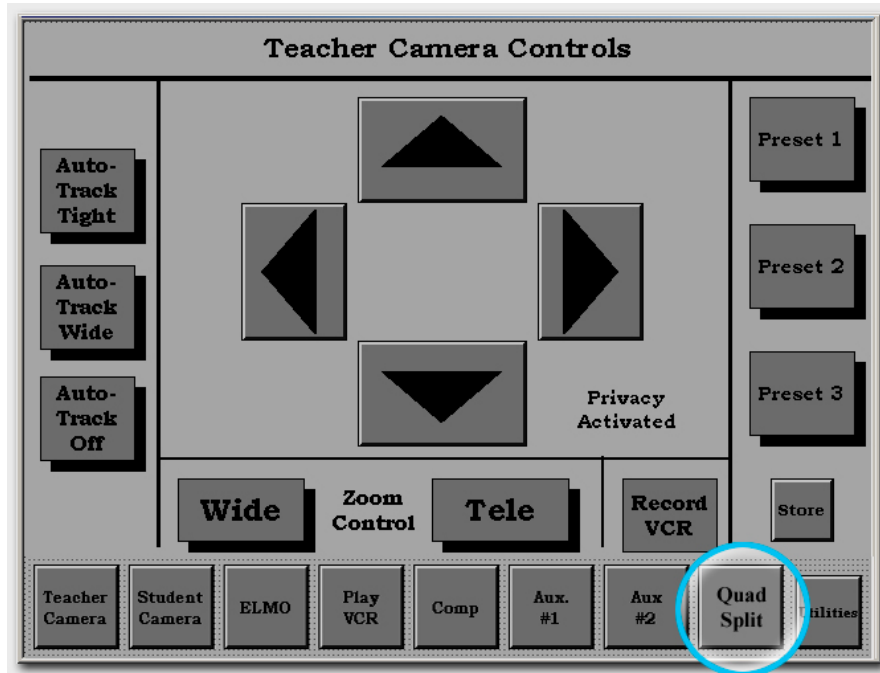

## Quad Split

 Pressing the **Quad Split** button will activate the Quad Split control.

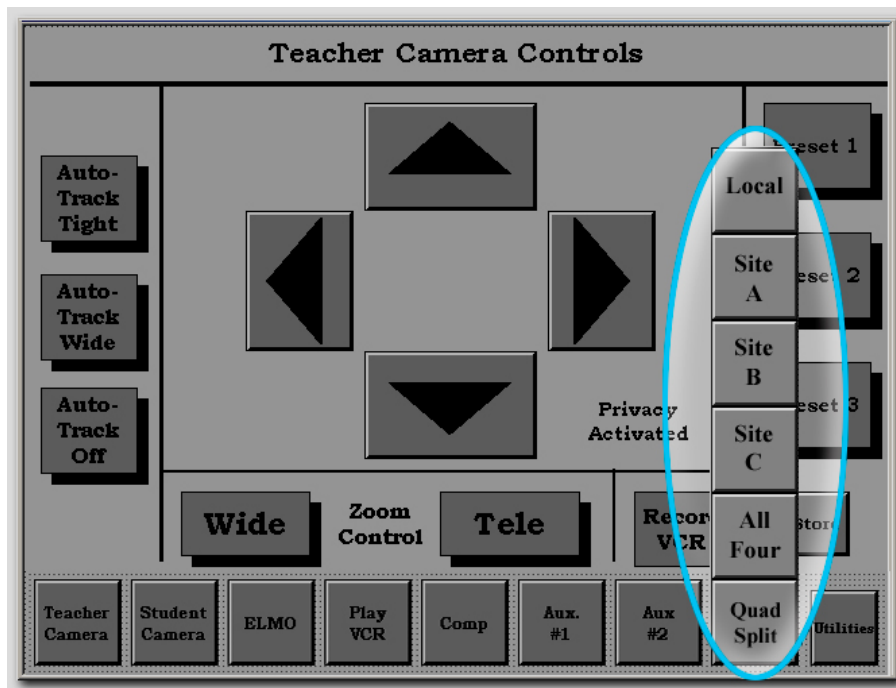

You are able to choose an individual site to be displayed full width on the projection screen or all four sites together, displayed in a quad split.

**BOCES**

**Distance  
Learning  
Program**

**Help Desk 1-888-427-9173**

 
**Quality • Access • Support**



---

# **Elmo**

The Elmo Document Camera adjustments can be made at the touch panel.

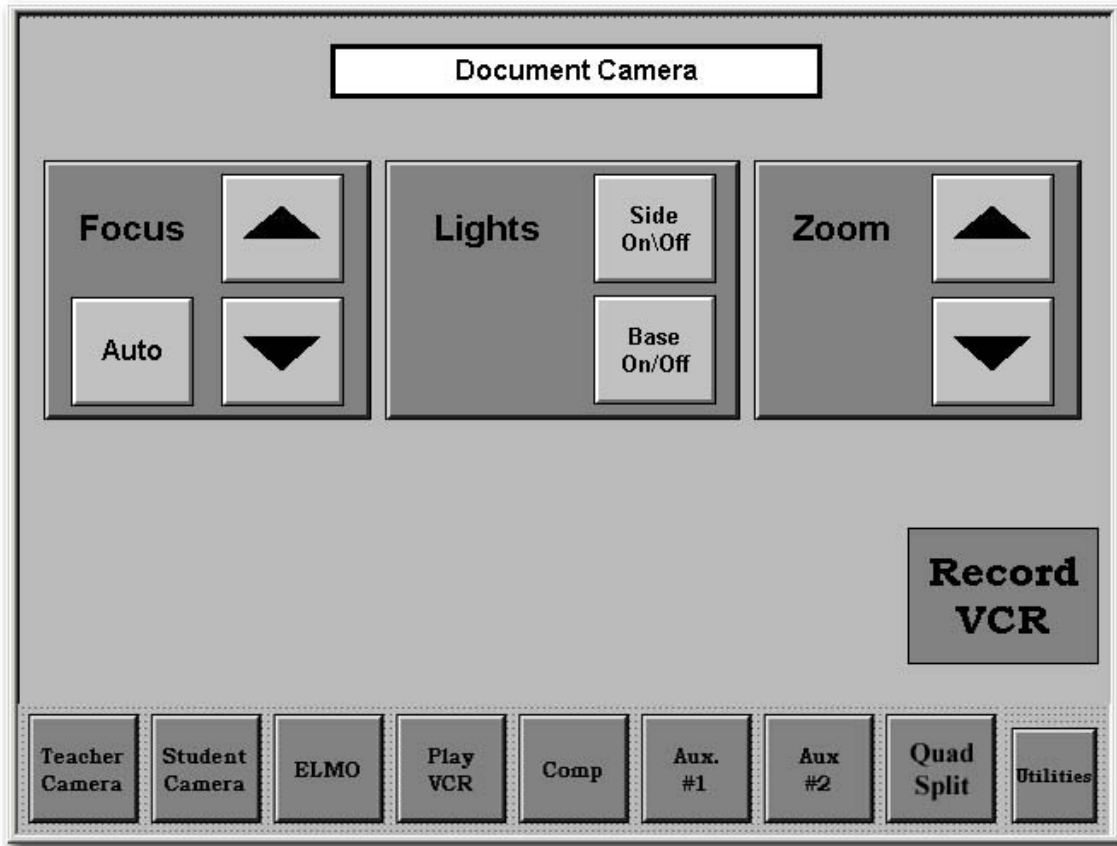







**Record VCR** will take you to control screen for the lower of the two VCRs in the equipment rack at the teacher's podium.

 ---
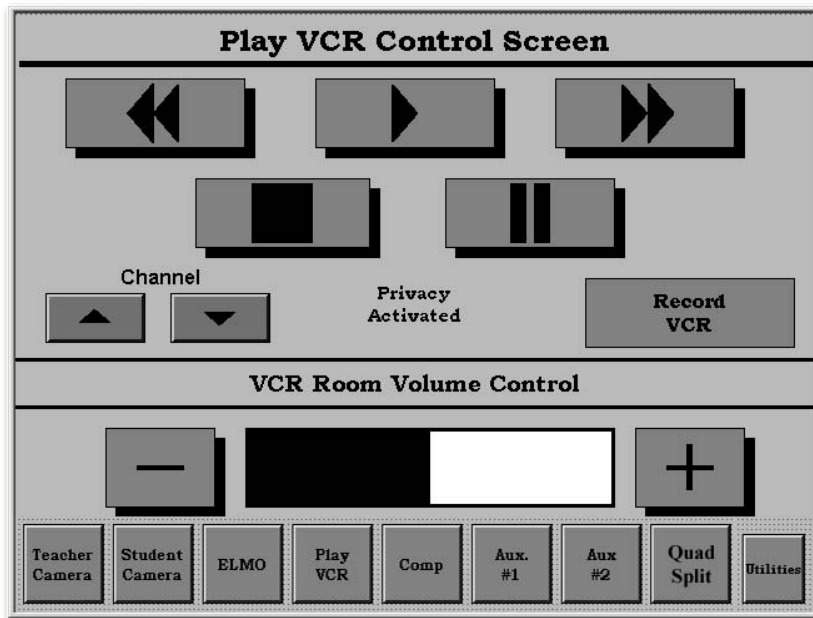
# Play VCR Control Screen

The Play VCR is the top VCR of the two located in the teacher podium.



	Rewinds the videotape.
	Plays the videotape.
	Fast-forwards the videotape.
	Stops the videotape.
	Pauses the videotape.

**VCR Room Volume Control** controls the level of volume that you hear and transmit to the receiving classrooms.

**Channel** is for control of in-room cable TV that may be installed in the future.

**Privacy Activated** will flash when that feature is activated. See *Utilities* page 13.


**Record VCR** will take you to controls for the record VCR.

---

# **Computer and Auxiliary Controls**



 When you select the computer or an auxiliary video source (such as a camcorder or DVD player), you will see one of these screens.

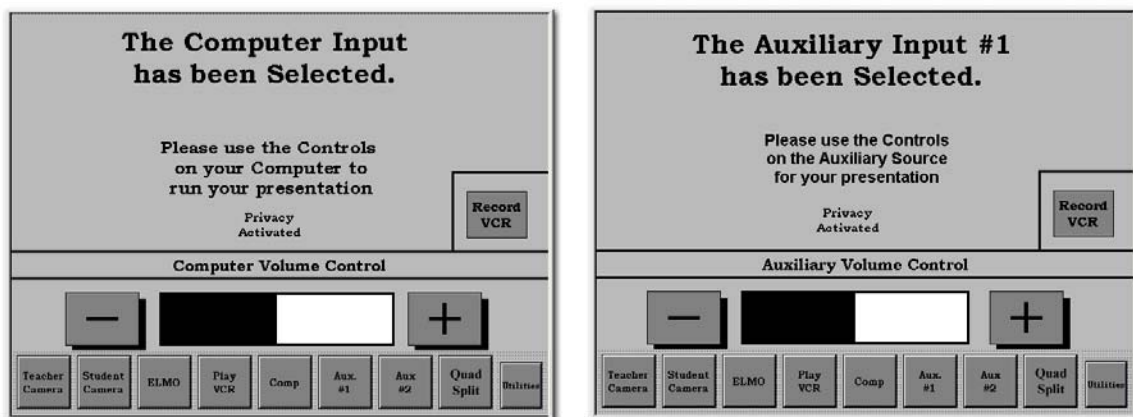

## **Computer – Auxiliary Volume Controls**

If you have an auxiliary audio source input into the rack, or if you have the computer selected, you will be able to control the volume from those sources at these screens.

**NOTE:** If you excessively increase the volume levels it may cause echo or other audio disturbances. (See page 13 - 14 for detailed information on volume control.)

 
If you adjust the output volume controls that are on the individual pieces of equipment (computer, camcorder, DVD, etc.), it will affect both the room volume and the transmitted audio level.

**All other adjustments for the computer or auxiliary equipment** should be made at the individual equipment.

---

# **Record VCR Controls**

When you select the **Record VCR** button you will see the screen below.

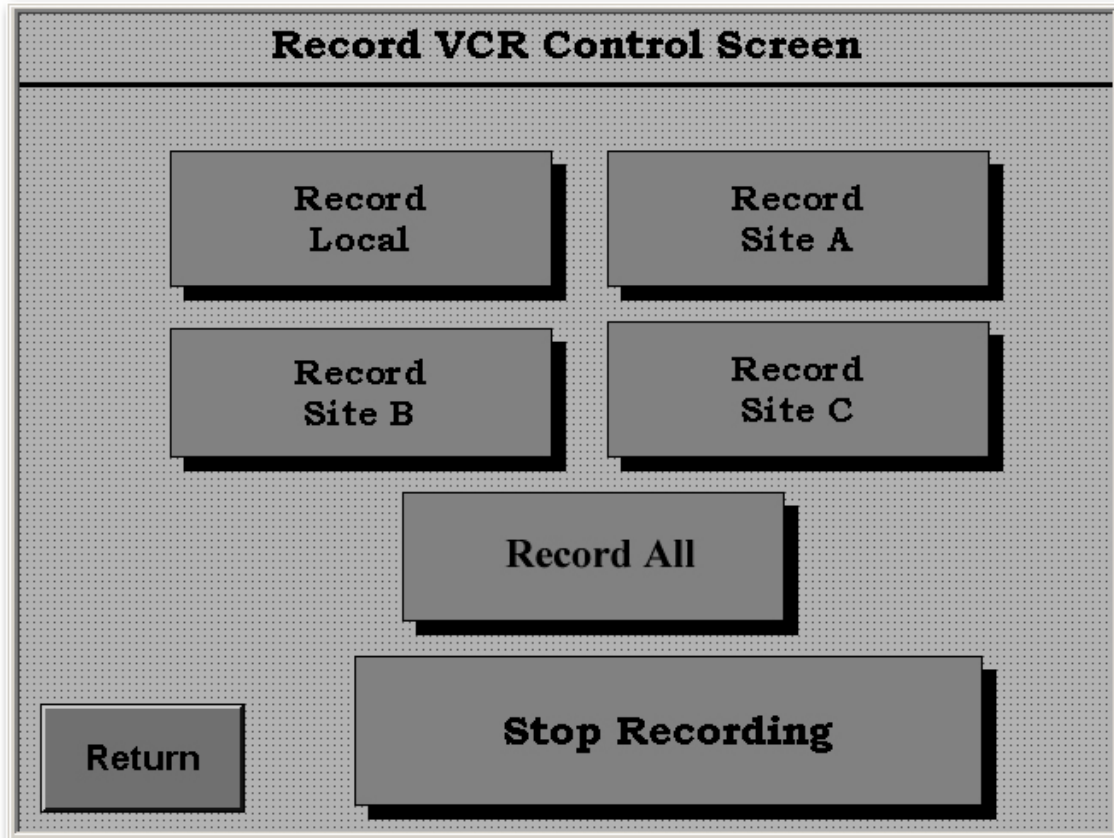

The Record VCR is the bottom of the two located in the teacher podium.

## **Site Recording Controls**

 
Touch **Local**, **Site A**, **Site B**, **Site C** or **Record All** to record the video from a particular site or all the sites together in a quad split.

**Recording will continue, even if you leave this screen**, until you return to the Record VCR control screen and press **Stop** or your tape reaches the end.

Note: While you may choose to record only one video source at a time, you record all audio from all sites in the cluster onto the tape.

---

# Utilities

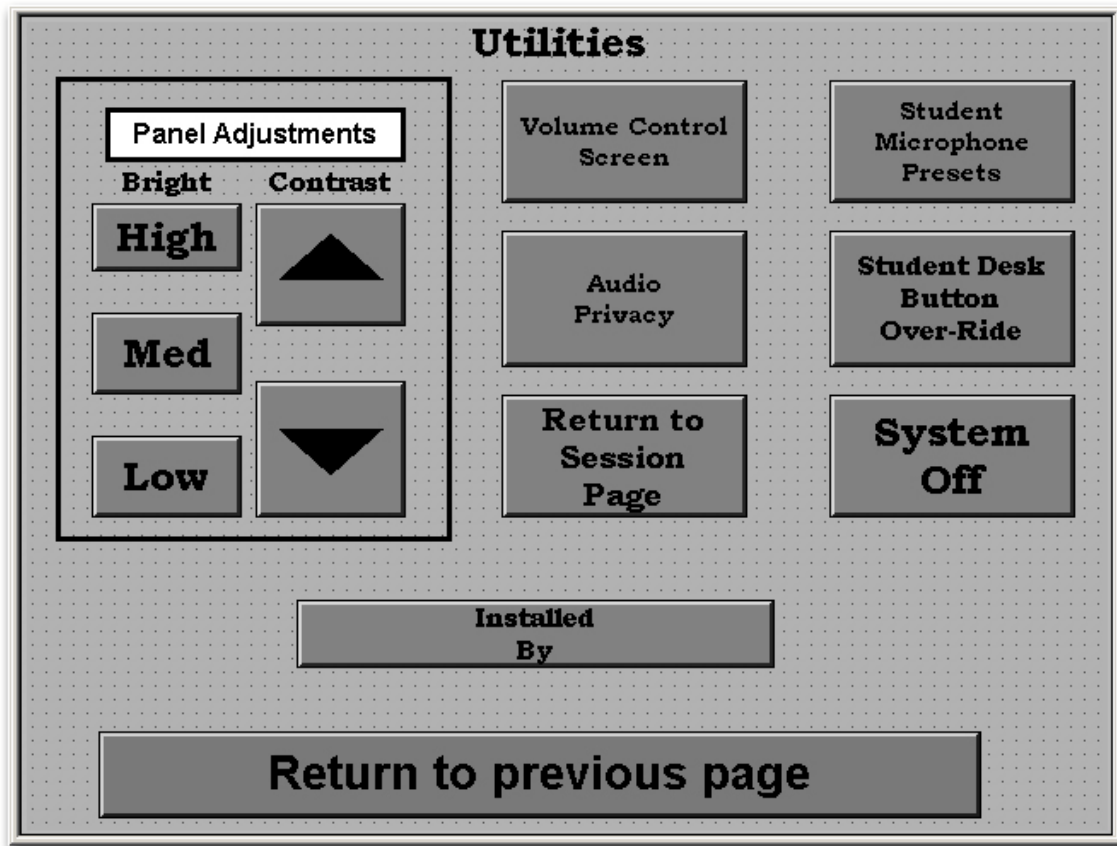

**Panel Adjustments** allow you to control the brightness and contrast of the touch screen display.

**Volume Control Screen** will take you to the screen where you can make fine adjustments to the incoming volume from individual sites.


**Audio Privacy** will turn off or on (depending on its position) all microphones in your room. You will still be able to hear remote sites, but they will not hear you. When activated, “Audio Privacy” will flash on the touch screen.

**Student Microphone Presets** will take you to the screen where you can adjust the preset associated with the button on each student microphone. [For detailed information about establishing or changing presets see, the Camera Presets instructions beginning on page 15.](#)

**Student Desk Button Over-ride** Turns off student control of the push-to-view feature.

---

# Volume Control Screen

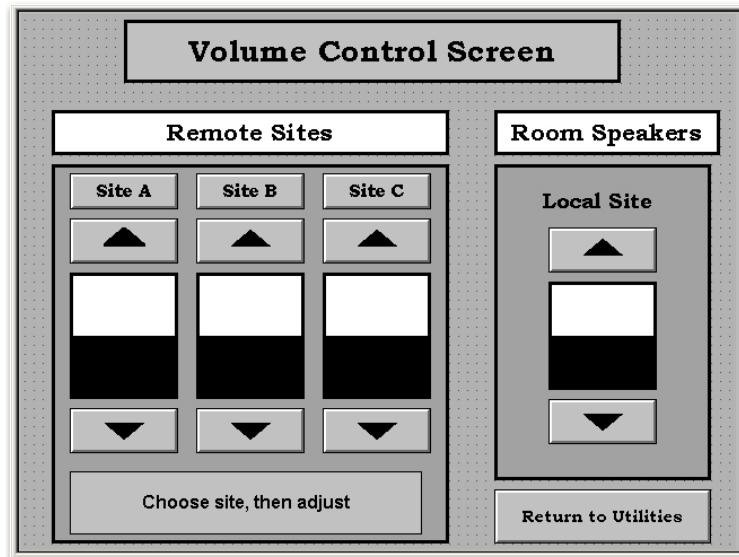 

## Remote Sites

The incoming volume of each individual remote site can be adjusted with the controls under the appropriate label, **Site A**, **Site B**, or **Site C**.

Adjustments are made with the [ ▲ ] and [ ▼ ] buttons.

**Room Speakers** control the overall volume in the room.

**Individual student and teacher microphones are automatically set in this room** and volumes are reset to the default adjustments (50%) whenever the room is powered down. This is not the case in every school on the DL network. Some schools have manual control of their individual microphone volumes.

## **IMPORTANT NOTE REGARDING AUDIO ECHO**

**A common cause of echo** is the excessive increase in site audio levels in an attempt to compensate for an individual who is speaking very softly and/or leaning back from their microphone.

 
**The solution** is to have the individual speak in a normal tone of voice and sit closer to the microphone.

If the individual is at a remote site that has individual microphone controls, you can request that the remote site increase **only** that microphone level. Please note that any adjustments you make to your volumes in your session may not work well in subsequent sessions.

---

# Camera Presets

Presets allow the convenient and quick choice of regularly used camera views by selecting one of the **Preset** buttons (instead of having to pan, tilt, and zoom in or out to a desired view each time.)

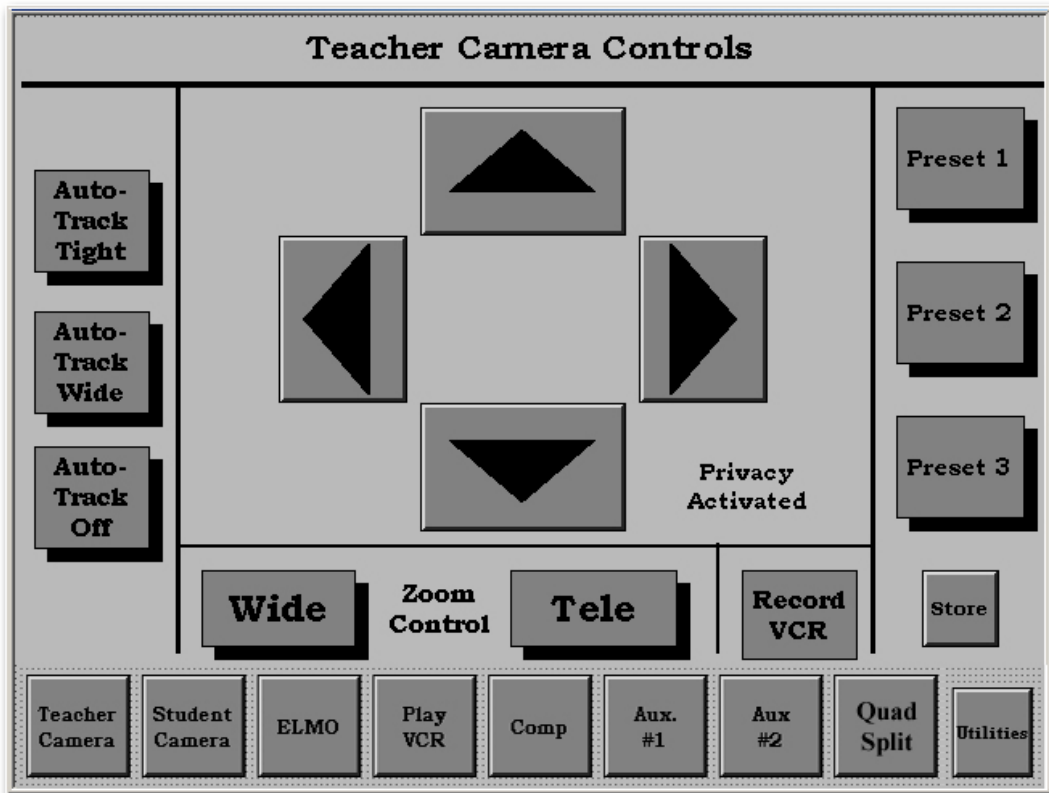

There are three types of camera presets that can be established, Teacher Camera Presets, Student Camera Presets and Student Microphone Presets. The procedure is similar in each case.


## 1. Teacher Camera Presets

 Note: **Preset 1** should be set as a fairly close shot of the instructor behind the teacher desk. However, Presets can be set to any camera shot based on your needs.

### To establish or change a teacher camera preset:

- Select (press) one of the numbered **Preset** buttons.
- Pan, tilt, and zoom the camera to the shot that you want by using the triangles and the **Zoom In** and **Zoom Out** buttons.
- Press **Store**.
- Press that same **Preset** button again.

## 2. Student Camera Presets

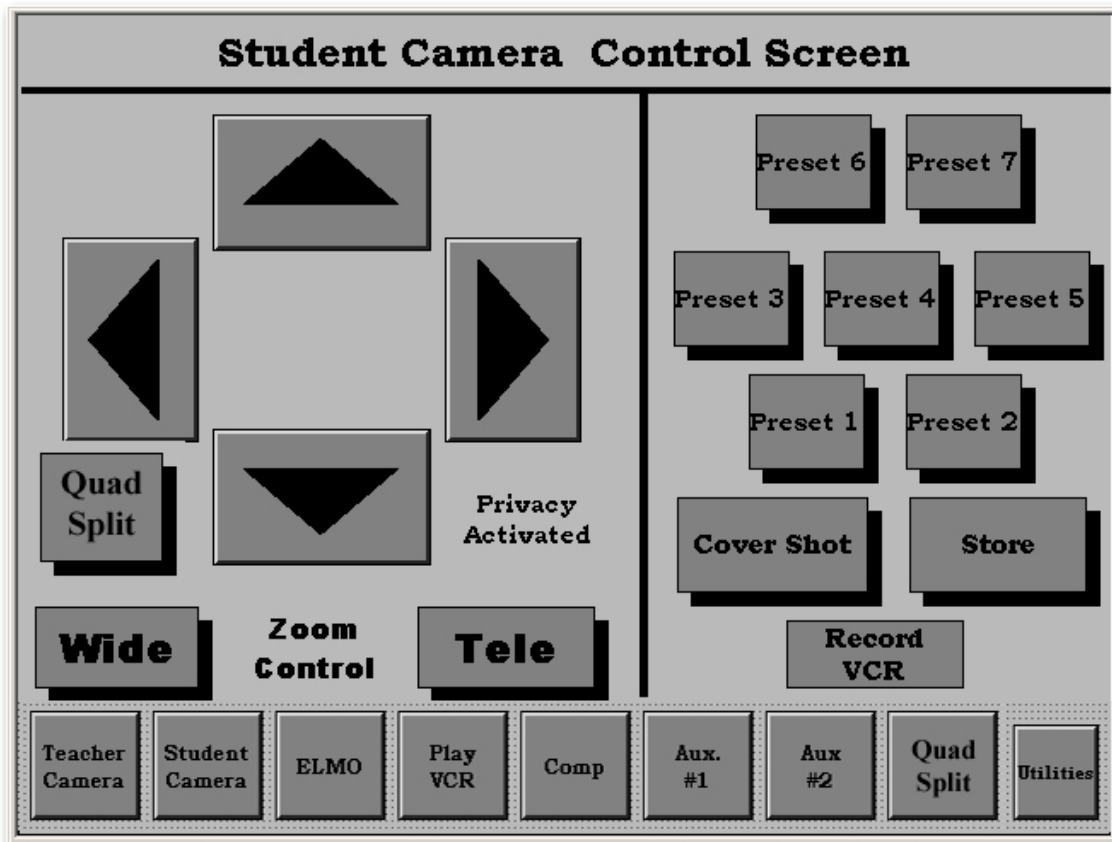

The student camera presets are established so the teacher or the aide can select preset student camera views using the Student Camera Control screen on the touch panel.

### To establish or change a student camera preset:

- Select a Preset or Cover Shot at the right of the screen. (The Cover Shot should be **just wide enough** to allow all students to be seen in one shot.)
- Pan, tilt, and zoom the camera to the shot that you want by using the triangles and the **Zoom In** and **Zoom Out** buttons.
- Press **Store**.
- Press that same **Preset** button again.



 
---

### 3. Student Desk-button / Microphone Presets

The teacher or teaching assistant can select **Preset** close-ups of students from the touch panel.

Students can press a button on their microphone that will automatically change the student camera view to their **Preset** close-up.

**Student Control of this feature can be activated or deactivated at any time at the discretion of the teacher. (See Disable Student Microphone Buttons on page 12 of this guide.)**

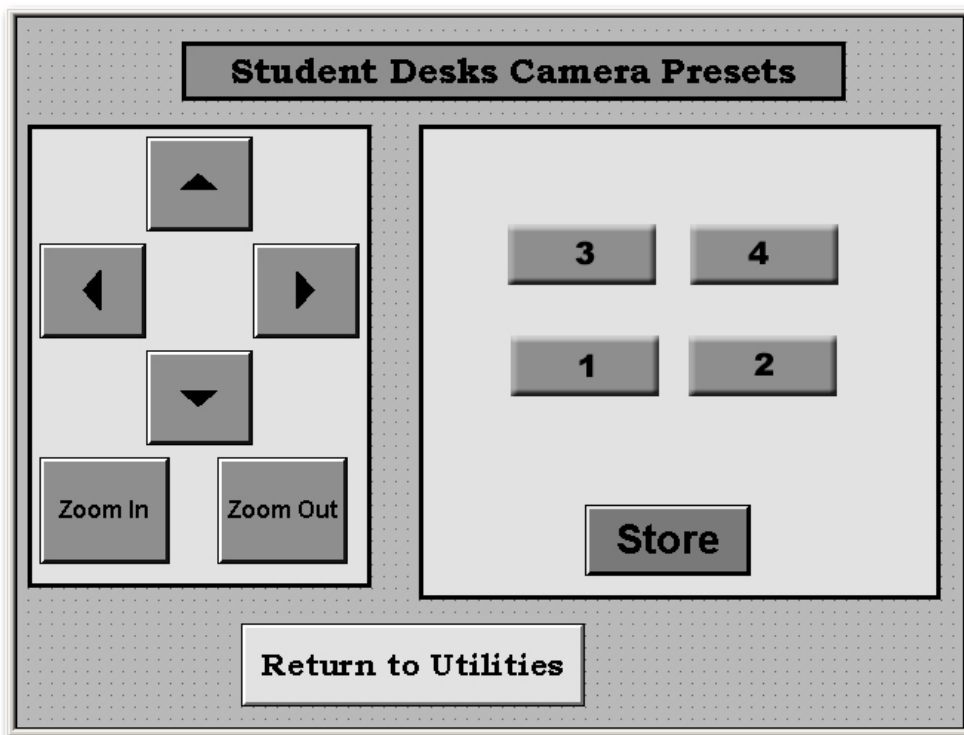

To establish or change an **Individual Microphone Preset**:

- A. Select (press) the appropriate numbered **Individual Microphone Preset** button at the right of the screen corresponding to the student position.
- B. Pan, tilt, and zoom the camera so that the view is properly adjusted.
- C. Press **Store**.
- D. Press that same **Preset** button again.